

- (2) Locate door hinge plates on door panel and install hinge attaching screws finger tight only.
- (3) Adjust jack to align hinge plate scribe marks and tighten attaching screws.
- (4) Complete door aligning procedure, and install door interior trim and hardware.

## **REAR DOOR (All Models)**

### **Removal**

- (1) Open rear door and place a padded jack under door near the hinges.
- (2) Remove door interior trim and hardware.
- (3) Scribe aligning marks around hinge plates on door frame.
- (4) Remove hinge attaching screws from door and remove door from body.

### **Installation**

- (1) With rear door inner hardware installed, support door on a padded jack and position door on hinges.
- (2) Install attaching bolts finger tight.
- (3) Align hinges with scribe marks.
- (4) Tighten attaching screws and test door for alignment.
- (5) Install door interior trim and hardware.

## **HINGE REPLACEMENT**

The door hinges (Fig. 10) are attached to the doors by screws accessible from outside. The front door hinges are each attached to the "A" post by three screws.

The rear door upper hinges are attached to the "B" post by three screws accessible through an access hole in the "B" post.

## **INSIDE HANDLES**

### **Window Regulator Handle**


The window regulator handles are retained on the shaft with an Allen set screw. The handles should be positioned on the shaft approximately in a horizontal position with the knobs facing rearward.

### **Remote Control Handle**

The remote control handle (Fig. 12) is attached to the control unit with a screw at the rear inner end.

### **Remote Control Handle (Special)**

- (1) Remove door handle trim bezel and carefully work bezel out over handle.
- (2) Remove necessary hardware to remove trim panel then remove panel.
- (3) Lower glass to full down position.

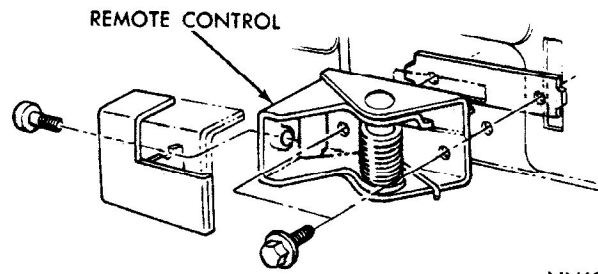

**Fig. 12—Remote Control Handle**

- (4) Remove remote handle link from door latch.
- (5) Remove remote link anti-rattle bracket.
- (6) Remove two screws from handle assembly and with twisting motion remove handle and link as on assembly.
- (7) Remove link from handle.

**NOTE:** On re-installation the rear flange of the handle assembly must be positioned on the outside face of the inner door panel.

## **ARM RESTS**

The arm rests are retained by two metal screws inserted at the bottom of the arm rest base. The pad and base can be separated and if necessary, the pad may be recovered.

## **TRIM PANELS**

### **Replacement**

- (1) Remove inside handles and arm rests.
- (2) Remove screws attaching trim panel to door inner panel.
- (3) Insert a wide blade screw driver between trim panel and door frame next to retaining clips and snap retaining clips out of door panel. Remove trim panel.
- (4) Before installing door trim panel, inspect condition of watershield.
- (5) Be certain the escutcheon spring is placed on the regulator shafts.
- (6) Align trim panel retaining clips with holes of door frame and bump into place with heel of hand.
- (7) Install trim panel to door screws.
- (8) Install escutcheon washer, handles and arm rest.

## **LOCK ASSEMBLY**

### **REMOTE CONTROL (MANUAL)**

#### **Removal**

- (1) Raise door glass.
- (2) Remove screws attaching remote control base to door panel (Figs. 12 and 13).
- (3) Remove link from remote control lever.