

## Replacing the Original Coil with the MSD Blaster Coil when Utilizing an MSD 5, 6 or 7 Series Ignition

NOTE: If you are installing an MSD 5, 6 or 7 Series Ignition at the same time as the Blaster Coil, you must prepare the MSD Blaster Coil according to the instructions supplied with your MSD 5, 6, or 7 Series Ignition.

### Utilizing the MSD 5 Ignition

Mark the wires presently hooked to the original coil according to their location. On the MSD 5 application the wires should be marked MSD Red, MSD Orange, MSD White, switched 12 volts, supply wire and ballast resistor as shown in Figure 2. Make note of the way the Black plastic spacer and tabs are hooked to the coil.

### Utilizing the MSD 6 or 7 Series Ignition

Mark the wire presently hooked to the original coil according to their location. On the MSD 6 and 7 Series Ignition the wires should be marked, MSD Red, MSD Orange, MSD Black, MSD White (if used) and ballast resistor as shown in Figure 3. Make note of the way the Red and Black plastic spacers and the tabs are hooked to the coil.

1. Remove the wires, Red and Black plastic spacers and the tabs from the original coil.
2. Remove the high voltage coil wire and loosen the bolt(s) that hold the coil in the original coil bracket. Remove the coil from the bracket.
3. Slide the MSD Blaster Coil into the bracket and tighten the bolt(s) to firmly hold the coil.
4. Install the wires, Red and Black plastic spacers and the tabs back on the coil in the reverse order of the way they were removed.
5. On MSD 5 applications refer to Figure 2 and instructions supplied with your MSD 5 Ignition for final wiring.
6. On MSD 6 and 7 Series applications refer to Figure 3 and the instructions supplied with your MSD 6 or 7 Series Ignition for final wiring.
7. Connect the high voltage coil wire to the tower and check to make sure all wires are securely fastened.
8. Start the vehicle.

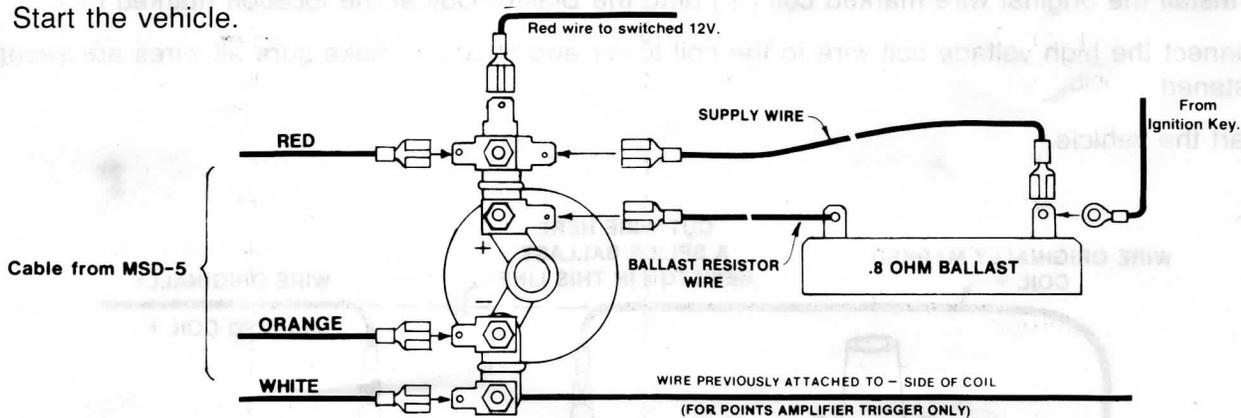


Figure 2

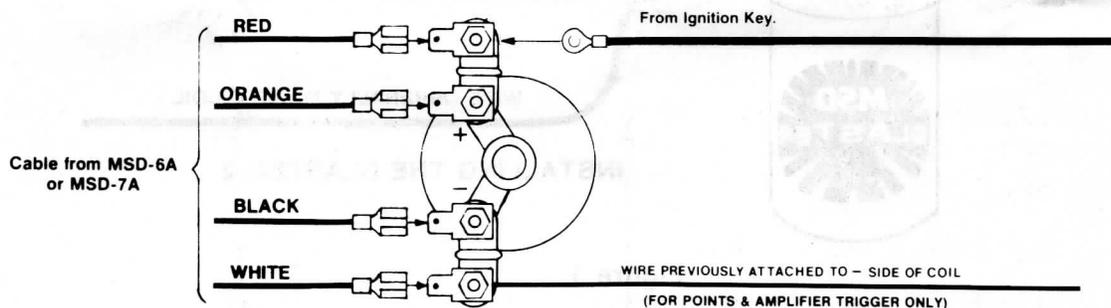


Figure 3

**AUTOTRONIC CONTROLS CORPORATION/MSD IGNITION**

1490 Henry Brennan Dr., El Paso, Texas 79936 • (915) 857-5200 • FAX (915) 857-3344