

BYPASSING THE BALLAST RESISTOR WITH THE RED WIRE

1. Locate the 12 volt wire on the 5 pin Chrysler Connector as shown in Figures 2 and 2A. This wire is usually color coded Blue/Yellow.

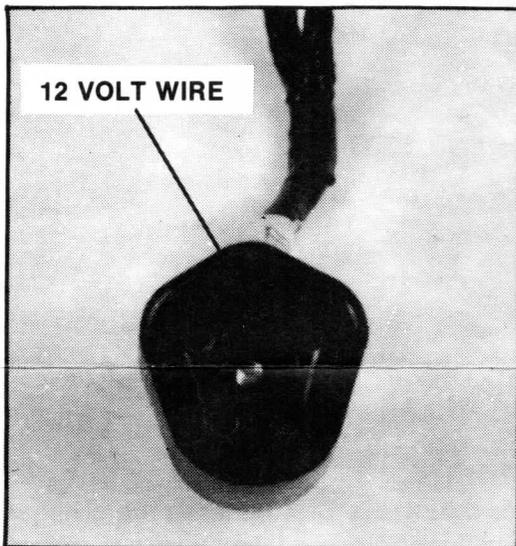


Figure 2

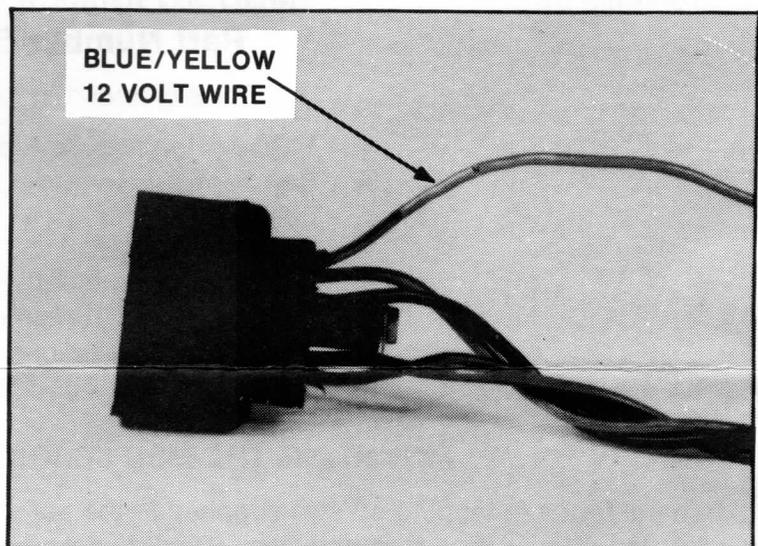


Figure 2A

2. Splice the Blue tab connector (supplied in the parts kit) into the wire located in Step 1. See Figure 3 for installing the Blue tab connector.

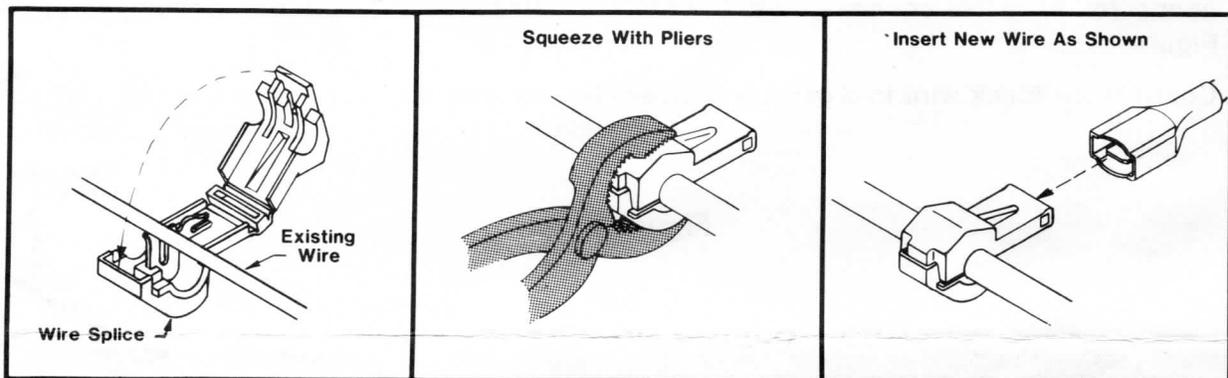


Figure 3

3. A 60" Red wire is supplied in the parts kit and has a female faston connector attached to one end, and an insulated male connector on the other end (Figure 4). Plug the insulated male connector into the Blue splice tab that was installed in Step 2.

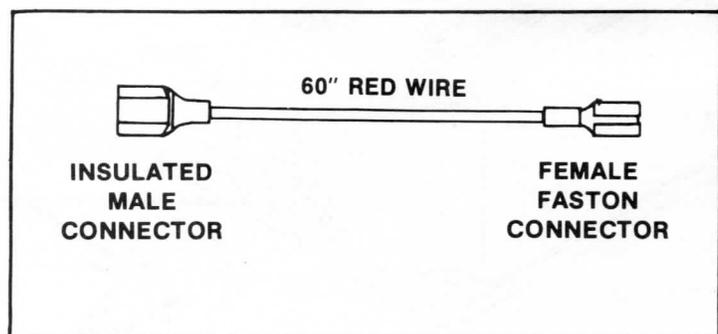


Figure 4